



SOFSCAPE PAVERS

INSTALLATION RECOMMENDATIONS

1. EXCAVATE TOPSOIL 7" BELOW THE FINISHED WALKWAY / PATIO LEVEL. THE EXCAVATED AREA SHOULD EXTEND 6" BEYOND THE AREA TO BE PAVED.
2. FILL IN 4" OF STONE, (1/4 THRU 3/4" STONE) or (QUARRY RUN STONE) = approx. 35 lbs sq.ft.
3. LEVEL & TAMP STONE UNTIL SURFACE IS COMPLETELY COMPACTED & FLAT. (WET AREA FOR BETTER COMPACTION IF NECESSARY). (See Fig. 1)

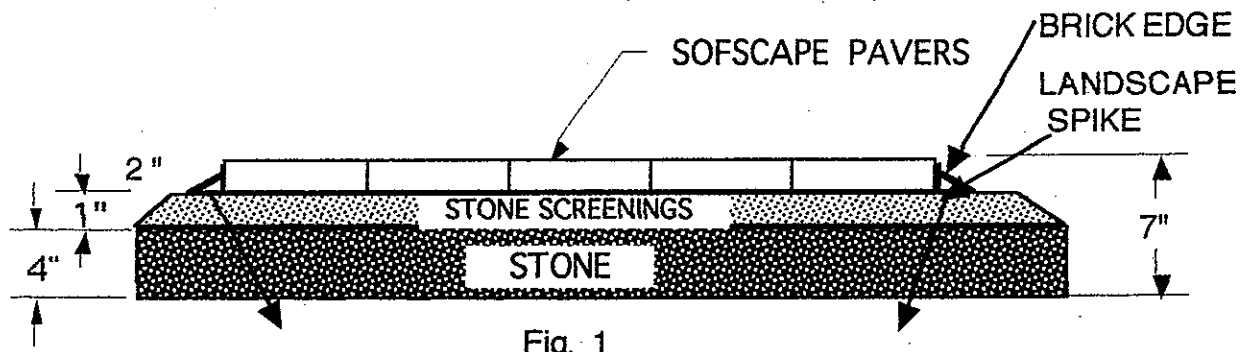

4. COVER STONE WITH 1" OF STONE SCREENINGS = approx. 10 lbs sq.ft.. SCREED UNTIL LEVEL.
5. BEGIN LAYING PAVERS FROM THE CENTER OF ANY SIDE OF THE AREA YOU WANT TO COVER. LAY PAVERS LIGHTLY & TIGHTLY KEEPING ALL SIDES & CORNERS ALIGNED. (DO NOT PRESS OR HAMMER PAVERS INTO LOOSE SURFACE).
6. PAVERS CAN BE CUT IN HALF, EITHER (POINT TO POINT) OR (FLAT TO FLAT). THESE HALVES CAN BE USED TO MAKE STRAIGHT EDGES & 90° CORNERS. PAVERS MAY BE CUT WITH A BAND SAW OR A PNEUMATIC CUTTER (See Fig. 2)
7. WHEN YOU REACH A PERIMETER OF THE COVERED AREA, PLACE (BRICK EDGE) FIRMLY AGAINST THE PAVERS AND SPIKE IN PLACE.
8. WHEN THE PAVERS ARE LAYED & FIRMLY EDGED IN PLACE, USE A VIBRATORY PLATE COMPACTOR. STARTING AT THE PERIMETER WORKING INWARD. REPEAT UNTIL THE PAVERS ARE SEATED AND LEVEL TO YOUR SATISFACTION.

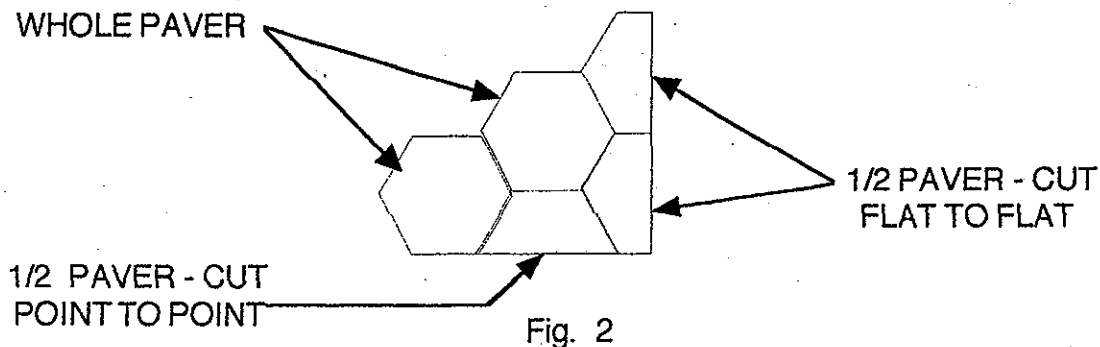

* FOR INSTALLATION ON FINISHED SURFACES (CONCRETE, WOOD, ASPHALT, OR BRICK) SEE OTHER SIDE FOR DETAILS.

WOODSTAR PRODUCTS, INC.
1824 Hobbs Drive • Delavan, WI 53115
(262) 728-8460 Voice • (262) 728-1813 Fax




Websites: www.woodstarproducts.com
www.wdstar.com

TOLL FREE (800) 648-3415

Sofscape™ Cushioned Pavers

Installation Recommendations

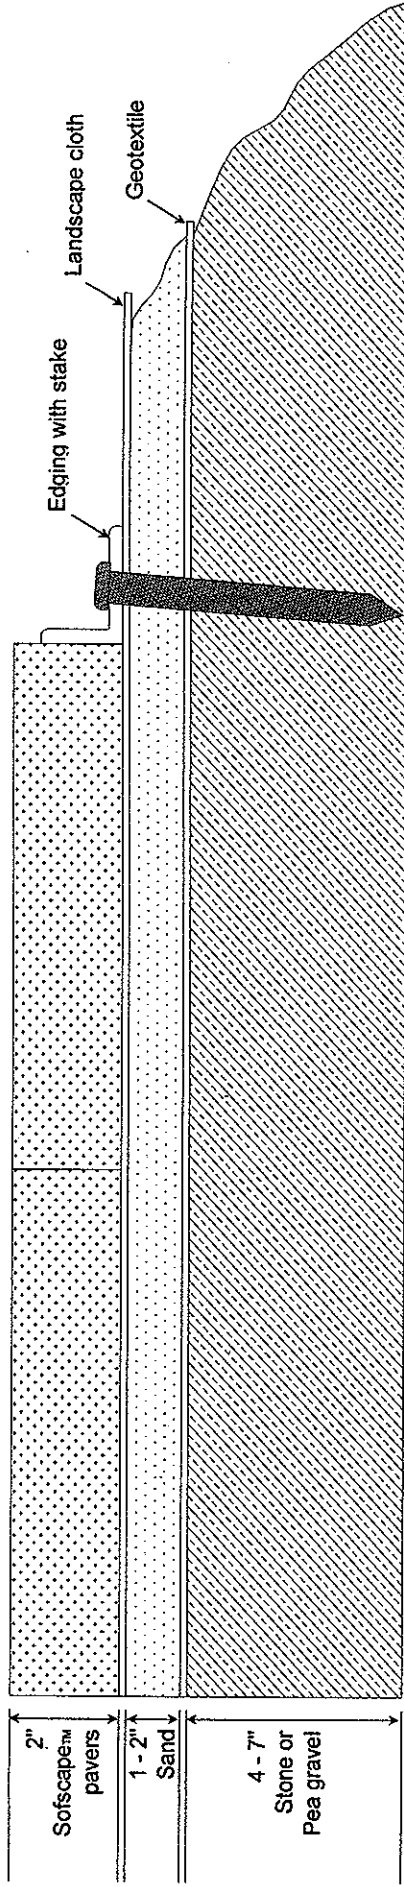

1. Excavate topsoil 7 - 11" below the finished level. The excavated area should extend 6" beyond the area to be paved.
2. If soil below excavated area is not stable, compact area with motorized or hand compactor.
3. Fill in 4 - 7" of stone aggregate (1/4" through 3/4") or pea gravel. Use the deeper stone in areas with poorer drainage. (Hint: Establish surface grade for the final paver surface with a slope of 1 - 1 1/2" per 10' away from adjacent building.)
4. Level and compact stone until surface is completely compacted and flat (wet area for better compaction if necessary.)
5. Lay 4 oz., non-woven geotextile over the stone to prevent migration of sand layer into stone.
6. Cover geotextile with 1 - 2" of clean sand. Compact, then screed until level and smooth. (Hint: Carefully position planks or pieces of plywood on surface for walking and working, to prevent dislodging smoothed sand.)
7. Lay a good-quality landscape cloth over the sand for a clean, ant- and weed-resistant application.
8. Begin laying pavers from the center of any straight side you wish, placing them snugly together and keeping all points and sides aligned. (Hint: To keep pavers snugly together while you are working, hold pavers on the working edge in position with weights.)
9. When a perimeter is reached, place edging firmly against pavers and spike into place.
10. Pavers can be cut to fit with a band saw or scroll saw.




WOODSTAR PRODUCTS, INC.
 1824 Hobbs Drive • Delavan, WI 53115
 (262) 728-8460 Voice • (262) 728-1813 Fax

Websites: www.woodstarproducts.com
www.wdstar.com

SOFSCAPE PAVERS

EXISTING SURFACE - INSTALLATION RECOMMENDATIONS FOR INSTALLATION ON FINISHED SURFACES SUCH AS CONCRETE, WOOD ASPHALT OR BRICK

1. THOROUGHLY CLEAN AND REMOVE ANY DIRT OR OIL.
2. REPAIR ANY DAMAGED OR UNEVEN AREAS ON THE SURFACE THAT WOULD NOT PERMIT THE PAVERS TO LAY FLAT.
3. FIND THE CENTER OF EACH END OF THE AREA TO BE COVERED AND SNAP A LINE PARALLEL TO THE SIDES OF THE AREA.
4. BEGIN LAYING PAVERS DOWN THE CENTER OF THE AREA WITH THE CENTER OF THE PAVER DIRECTLY ON THE SNAPPED LINE, (FLAT TO FLAT). LAY PAVERS TIGHTLY KEEPING ALL CORNERS AND SIDES ALIGNED. (SEE FIGURE #1)

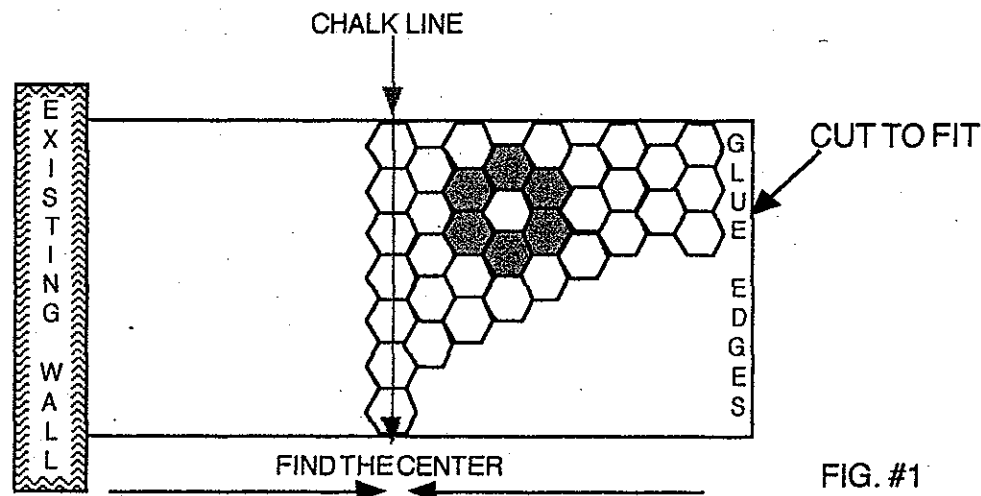

5. AROUND THE PERIMETERS OF THE AREA THE PAVERS WILL NEED TO BE CUT TO SIZE.
6. ALONG THE SIDES THAT DO NOT HAVE AN EXISTING WALL OR EDGE, THE LAST ROW OF PAVERS NEED TO BE CUT AND GLUED TO THE SURFACE TO RETAIN THE EDGES OF THE PAVED AREA. SMALL PIECES ON THE EDGE NEED TO BE GLUED TO THE SURFACE AND THE SIDES OF THE ADJOINING PAVERS. (SEE FIGURE #1)
7. ALONG THE EXISTING WALL OR EDGE, THE PAVERS NEED TO BE CUT SLIGHTLY OVERSIZE AND INSTALLED TIGHTLY INTO POSITION.

WOODSTAR PRODUCTS, INC.

1824 Hobbs Drive • Delavan, WI 53115
(262) 728-8460 Voice • (262) 728-1813 Fax




Websites: www.woodstarproducts.com
www.wdstar.com

TOLL FREE (800) 648-3415

Sofscape™ Cushioned Pavers

Installation Recommendations for Pavers Over Existing Surface

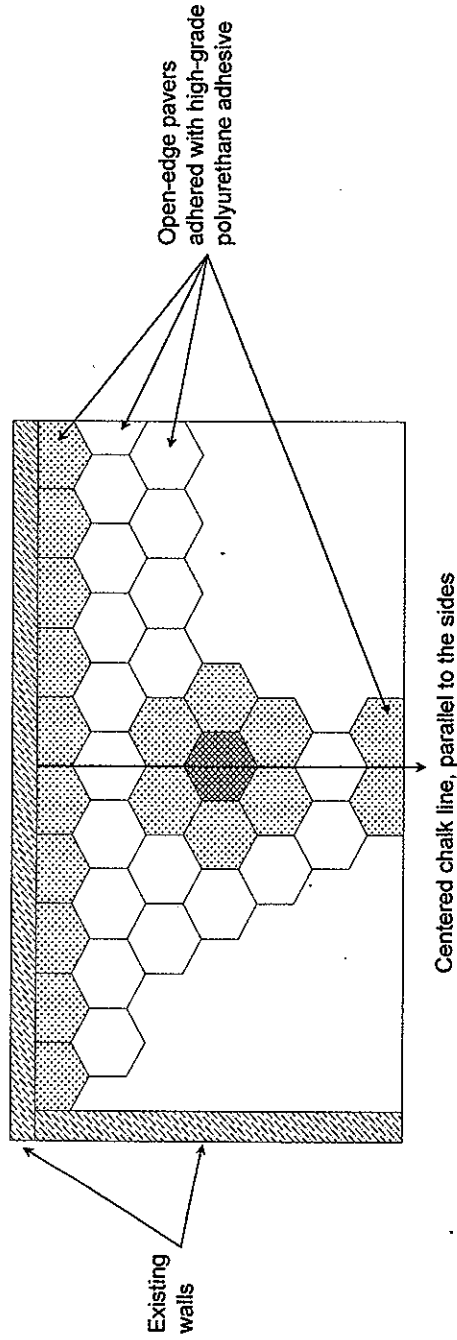

1. Thoroughly clean and remove any dirt or oil from surface to be paved with Sofscape™ - wood, concrete, or asphalt.
 2. Repair any damaged or uneven areas on the surface that would not permit the pavers to lie flat.
(Important: Wood surface should be constructed of a good quality treated lumber that has been recently sealed. Ensure that the structure of the wood surface is sound and able to support the weight of Sofscape™ at approximately 9# per square foot.)
 3. Find the center of each end of the area to be covered and snap a chalk line parallel to the sides of the area.
 4. Begin laying pavers along the line, with the center paver directly on the line.
(Hint: Be sure to keep pavers placed snugly together, with points and sides of pavers aligned with the chalk line.)
- Small pieces cut to fill in along edges need to be adhered to the surfaced and to the sides of adjacent pavers.
6. Pavers along the open edges can be secured with either of two methods:
 - a. Install an edging along the outside of the existing surface
 - b. Adhere edge pavers to the existing surface with a high-grade polyurethane adhesive
(Hint: Place weights on adhered pavers to hold them firmly in position for the recommended curing time of the adhesive.)
 7. Pavers can be cut to fit with a band saw or scroll saw.



WOODSTAR PRODUCTS, INC.
 1824 Hobbs Drive • Delavan, WI 53115
 (262) 728-8460 Voice • (262) 728-1813 Fax


Websites: www.woodstarproducts.com
www.wdstar.com

TOLL FREE (800) 648-3415

WOODSTAR PRODUCTS, INC.

Sofscape Pavers

Size of this layout is approximately 30' x 20.5'

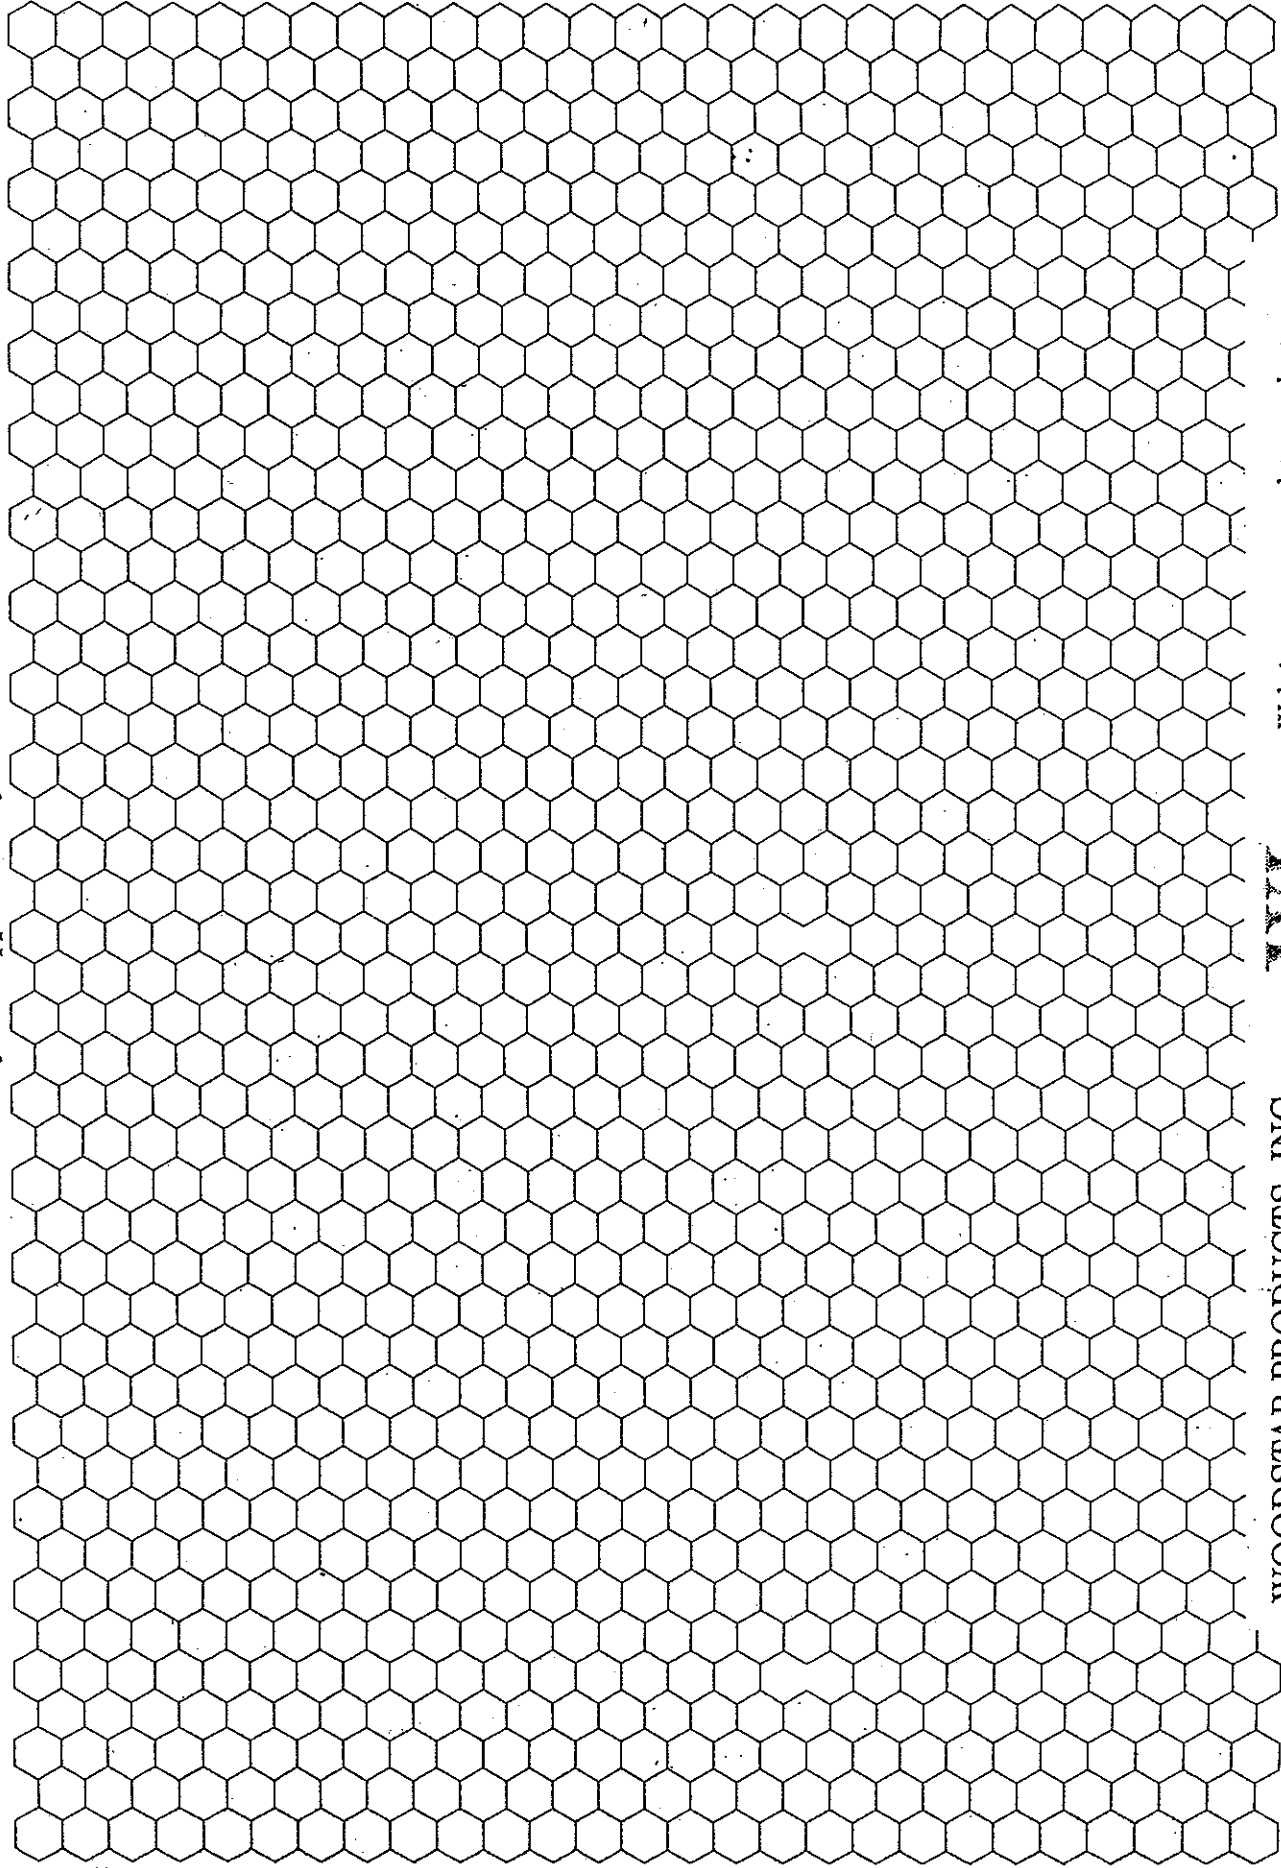

WOODSTAR PRODUCTS, INC.
1824 Hobbs Drive • Delavan, WI 53115
(262) 728-8460 Voice • (262) 728-1813 Fax



Websites: www.woodstarproducts.com
www.wdstar.com

TOLL FREE (800) 648-3415