

PAVERBLOCKS™ RUBBER PAVERS INSTALLATION



BASE

The base under the PaverBlocks rubber pavers is extremely important to the quality of the finished job. Produce a flat bed of sand, fine limestone, or stone dust over a compacted, stable foundation that complies with the climate and codes for your area. Be sure to pay attention to the gradient of the base to allow for adequate drainage. Note: Take into consideration the paver thickness. We do not recommend the 7/8" pavers be used without a concrete base.

You should have a solid, rigid barrier or curbing on all sides of the paving area to keep the system interlocked. Depending on the type of ground bordering the paving area, you may want to use edge borders for grassy areas.

All irregularities in existing compacted bases (e.g. existing concrete or asphalt) should be leveled out using a compensation layer such as sand, limestone, or stone dust. If necessary, the pavers can also be bonded together or onto the base. If the base is not impervious to water, make sure water can drain away. Color changes cannot be completely avoided if puddles form underneath the surface.


If the base is not impervious to water, make sure you have adequate drainage. A slope of 1.5% to a drainage pit is recommended over such a base so that puddles will not form under the pavers. Again, it is best to check with your contractor.

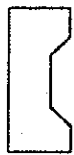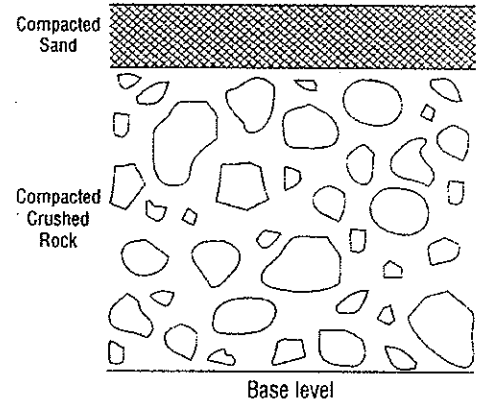

STARTER PAVER

1 3/4" or 7/8" deep
7 1/8" high
3 1/8" wide


Cut whole paver in half vertically

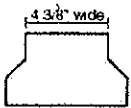

HALF PAVER

4 3/8" wide
1 3/4" or 7/8" deep
3 1/16" high
6 1/4" wide

Cut whole paver in half horizontally

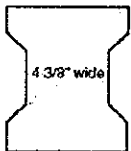



WHOLE PAVER

4 3/8" wide
1 3/4" or 7/8" deep
7 1/8" high
6 1/4" wide

3.4 Whole Pavers = 1 sq.ft.

LAYING AN AREA

1. PaverBlocks rubber pavers can be trimmed and cut using a band saw or a break-off utility blade knife. Cut whole pavers to make starter and half pavers. Begin laying the starter pavers along an edge border of the previously prepared base. See Diagram A
 2. Start row 2 with a half paver and continue laying the remaining area in accordance with the pattern in use. See Diagram B
- Put the paver elements close together so that no sand can get caught in the gaps.

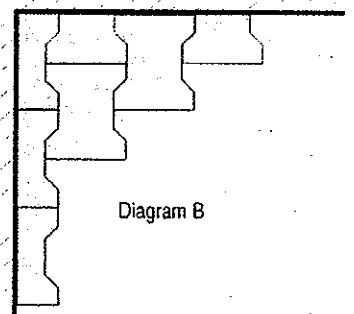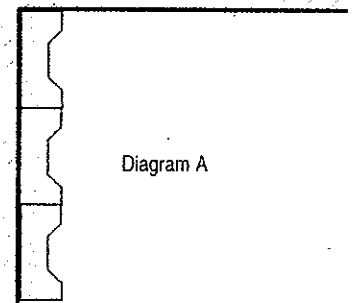


Distributed by

WOODSTAY PRODUCTS, INC.





1824 Hobbs Drive • Delavan, WI 53115
(262) 728-8460 • (262) 728-1813 Fax
TOLL FREE (800) 648-3415

LIMITATION OF WARRANTIES TO THE EXTENT PERMITTED BY APPLICABLE LAW, DOUBLE L GROUP LTD. DISCLAIMS ANY AND ALL WARRANTIES, EXPRESS OR IMPLIED, INCLUDING WITHOUT LIMITATION WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, FOR ANY REPRESENTATIONS OFFERED. THIS DISCLAIMER DOES NOT APPLY TO ANY PRODUCT WARRANTY OFFERED BY THE MANUFACTURER OF THE ITEM. WOODSTAY PRODUCTS, INC. OR ANY OF ITS EMPLOYEES, DIRECTORS, OFFICERS OR AGENTS, BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, CONSEQUENTIAL, PUNITIVE, OR EXEMPLARY DAMAGES, INCLUDING BUT NOT LIMITED TO DAMAGE OR INJURY TO PERSONS, PROPERTY OR ANIMALS, WHETHER IN TORT OR CONTRACT, EVEN IF AN AUTHORIZED REPRESENTATIVE OF DOUBLE L GROUP LTD. HAS BEEN ADVISED OF OR SHOULD HAVE KNOWN OF THE POSSIBILITY OF SUCH DAMAGES. OUR EXCLUSIVE LAWS TO GOVERN OUR WARRANTIES OR THE APPLICATION OF CERTAIN DAMAGES. IF THESE LAWS APPLY TO YOU, SOME OR ALL OF THE ABOVE DISCLAIMERS, EXCLUSIONS OR LIMITATIONS MAY NOT APPLY TO YOU AND YOU MAY HAVE ADDITIONAL RIGHTS.

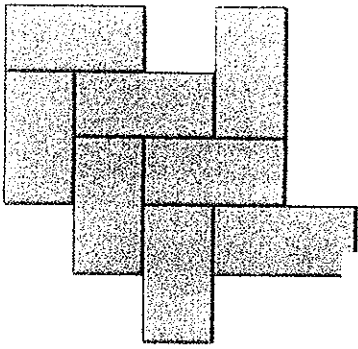

S I M P L E I N S T A L L A T I O N

1. Start by laying a PaverMat into a corner.
2. Now continue adding PaverMats until your surface is covered.
3. Simply trim off the protruding parts of the mat, and place the parts into the holes. Now your surface is 100% ready for use!

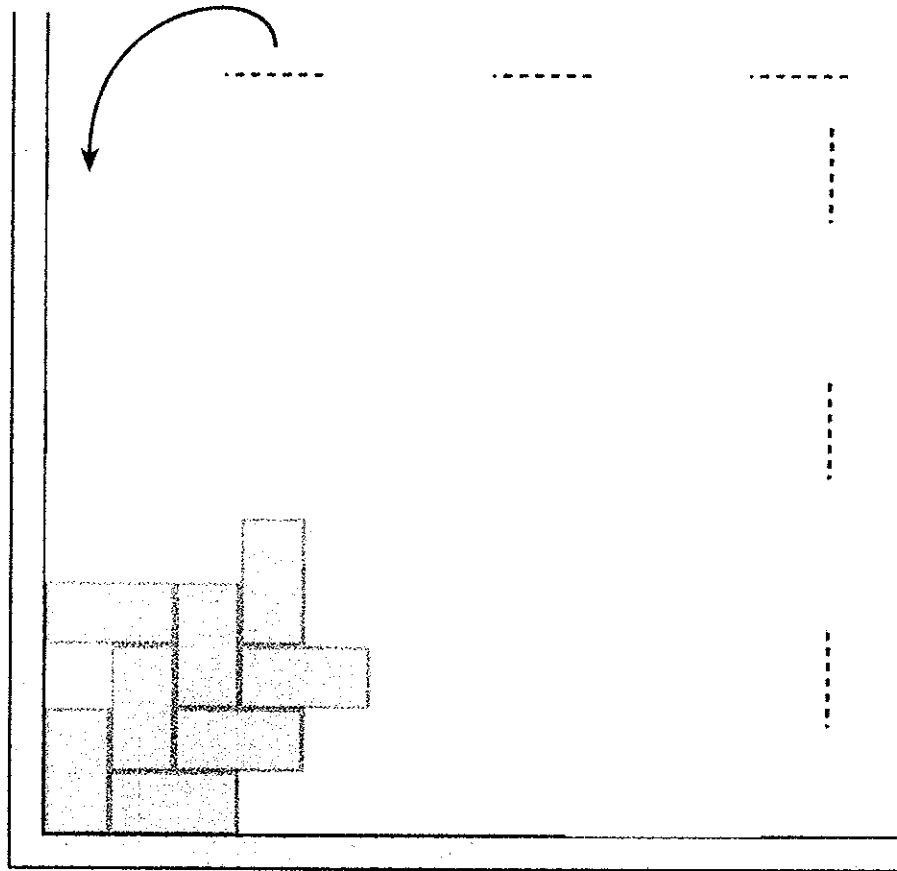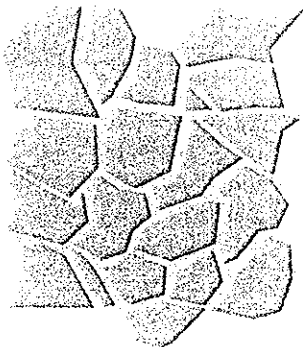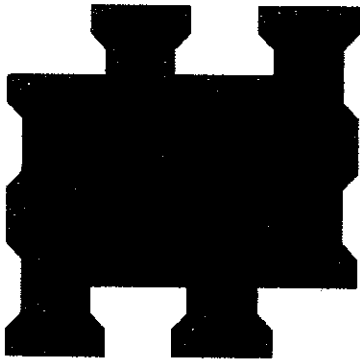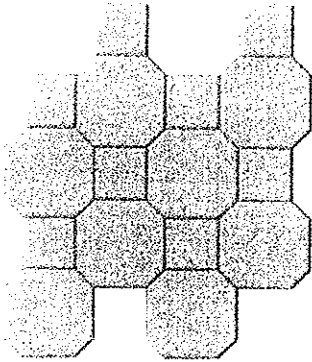

WOODSTAR PRODUCTS, INC.
1824 Hobbs Drive • Delavan, WI 53115
(262) 728-8460 Voice • (262) 728-1813 Fax
TOLL FREE (800) 648-3415