


# WOODSTAR PRODUCTS, INC.

## DW-34 AND DW-44 INSTALLATION INSTRUCTIONS

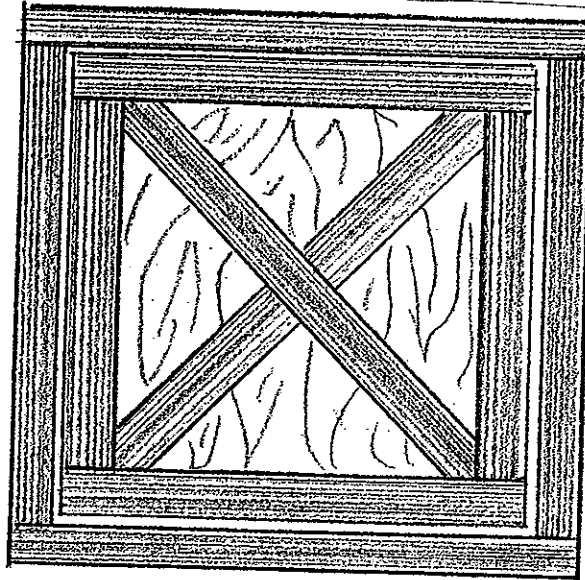


- 1. CREATE AN OPENING FOR PROPER DOOR SIZE  
THIS IS YOUR ROUGH OPENING. (R.O.) SEE PAGE #2**
- 2. LINE ALL FOUR SIDES W/ 2X BOARDS TO MAKE YOUR  
FINISHED OPENING. (F.O.)**
- 3. FACE FRAME ALL FOUR SIDES OF OPENING W/ 2 X 4'S  
THIS WILL BE YOUR BRICK MOLD**
- 4. ATTACH HINGES TO DOOR FACE**
- 5. PLACE DOOR IN OPENING USING SPACERS SO DOOR  
HAS EQUAL SPACE ON ALL FOUR SIDES**
- 6. ATTACH HINGE TO FACE FRAME & REMOVE SPACERS**
- 7. ATTACH A 1 X 2 WOOD STOP STRIP TO ALL FOUR SIDES OF  
FINISHED OPENING SO DOOR STOPS FLUSH W/FRAME**
- 8. MOUNT LATCH TO DOOR & ATTACH DOOR HOOK  
TO KEEP DOOR HELD IN OPEN POSITION**

**OVER PLEASE**




1824 Hobbs Drive • Delavan, Wisconsin 53115

Phone: (262) 728-8460 • Fax: (262) 728-1813 • (800) 648-3415 • Web: [www.wdstar.com](http://www.wdstar.com) • email: [stalls@wdstar.com](mailto:stalls@wdstar.com)

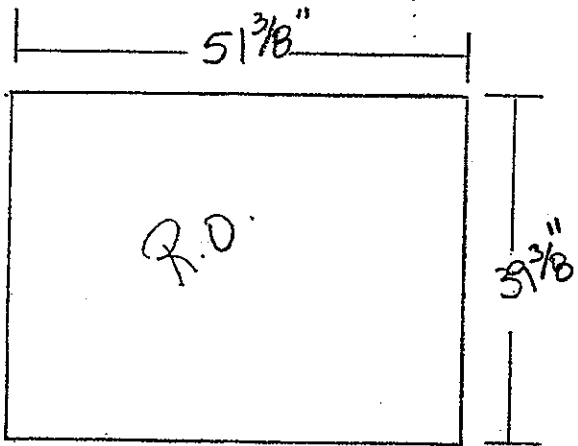


DW-43

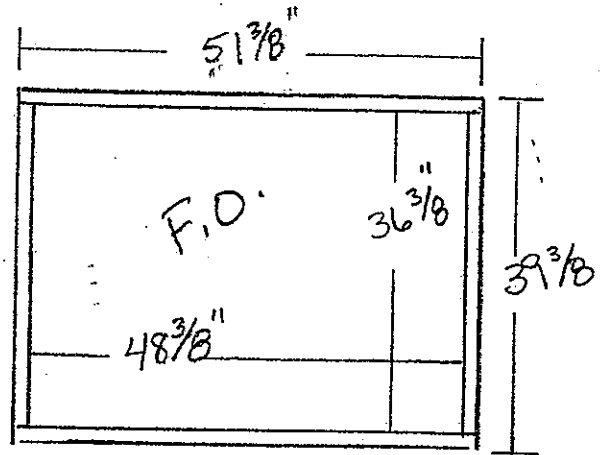

MINIMUM ROUGH OPENING SIZE

FINISHED OPENING SIZE

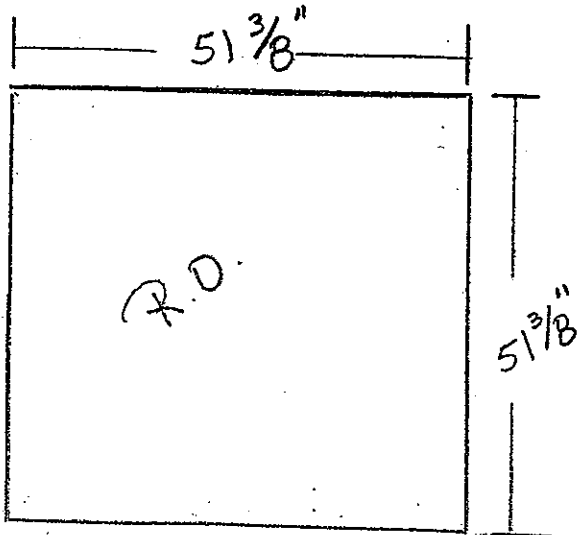

DW-44

